


Before installation be sure to reference the instruction manual attached in order to install the bed portion of your Abbott Library bed.

Note


When installing the Murphy bed be sure to leave plenty of room for the surrounding bookcases. The Abbott fully assembled is; queen 129.5" wide, full 117.5" and twin 87.5." Be sure that you have allowed room for these dimensions. Once you have successfully installed and properly placed the bed. You can start placing and putting together the bookcases as well as the main crown.

The Abbott Library Bed


Abbott Pieces

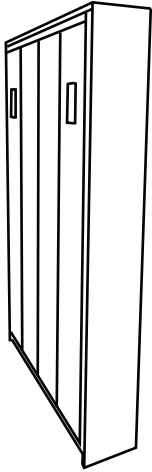



Murphy Bed
(1 Piece)

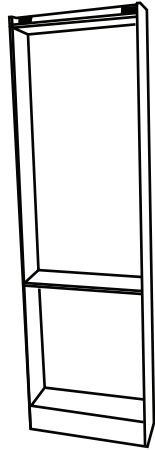


Sliding Front
Bookcase
(2 Pieces)

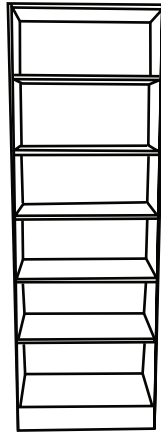

Stationary Back
Bookcase
(2 Pieces)

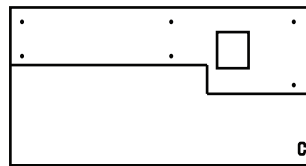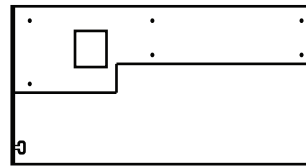


Main Crown
(2 Pieces)

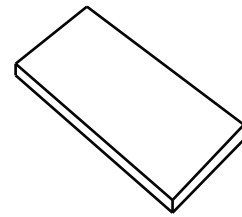

Shelves (16)
Base Covers (2)


Step 1

Place the 2 stationary bookcases flush along both sides of the **installed Murphy bed**. These two bookcases will not need to be secured to the wall.

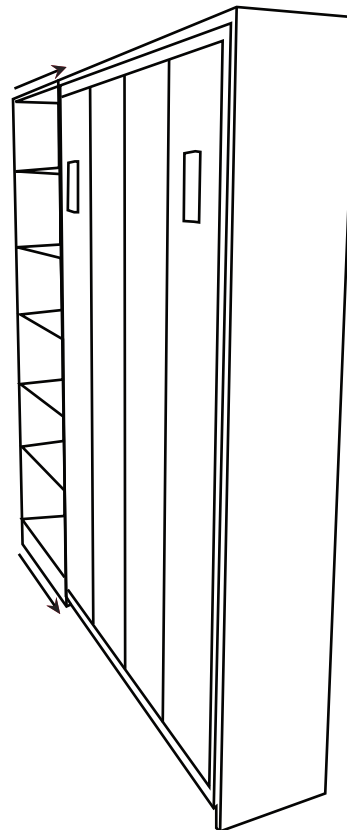


Step 2

Now that the stationary bookcases are aligned with the bed, place one of the main crown assemblies on the partially assembled unit.

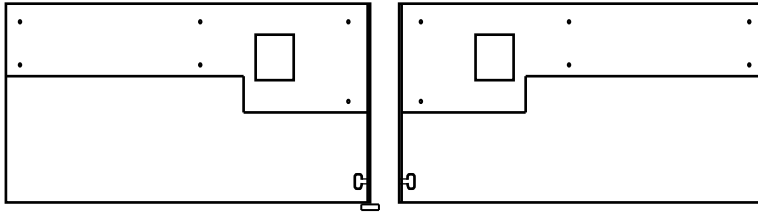


Main Crown
2 Pieces

Front

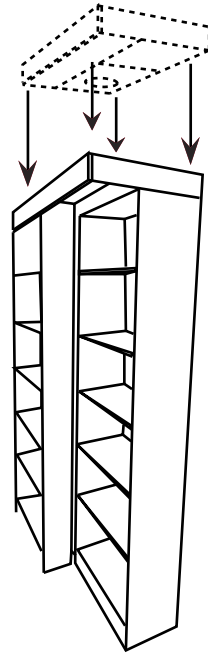

Step 3

With the first half of the main crown in place, slide both rolling bookcases under the previously placed crown. Once both rolling book cases are under that portion of the crown, align the second portion of the main crown assembly.

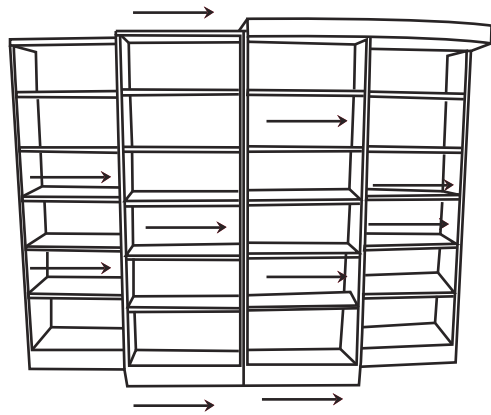


Step 4

With the rolling bookcases now in place, align the two crown pieces together using the provided 3-3/4" pan-head bolts and washers.

Note


Be sure that when placing the main crown pieces together that they are aligned with the bed and all four bookcases before attaching together.

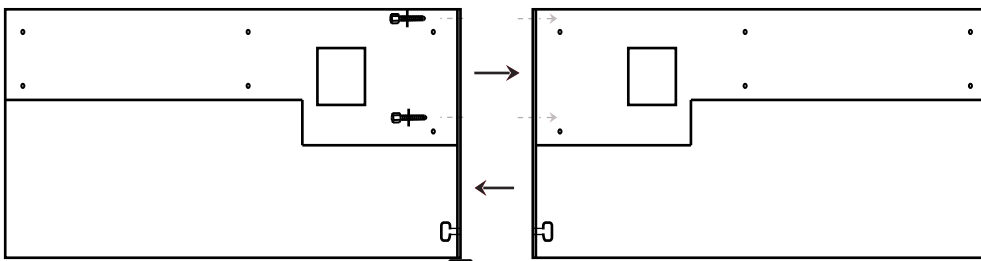

(Above view)


Step 5

Now that the crown is placed properly and aligned, finish connecting the two pieces using the provided nut onto the pan-head bolt and washer.

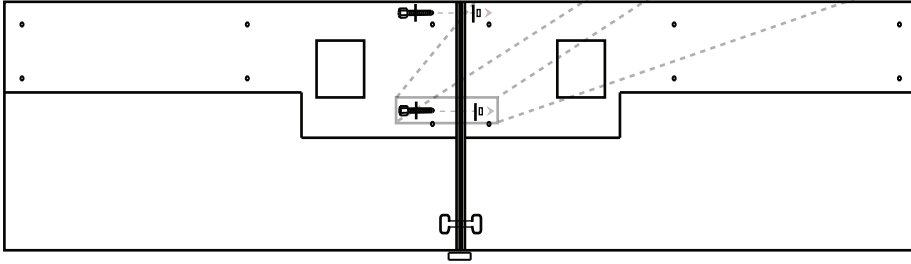




Step 6

Place the provided flip-bolt in the slot. Tighten as needed until the center gap between the crown pieces become flush to one another.

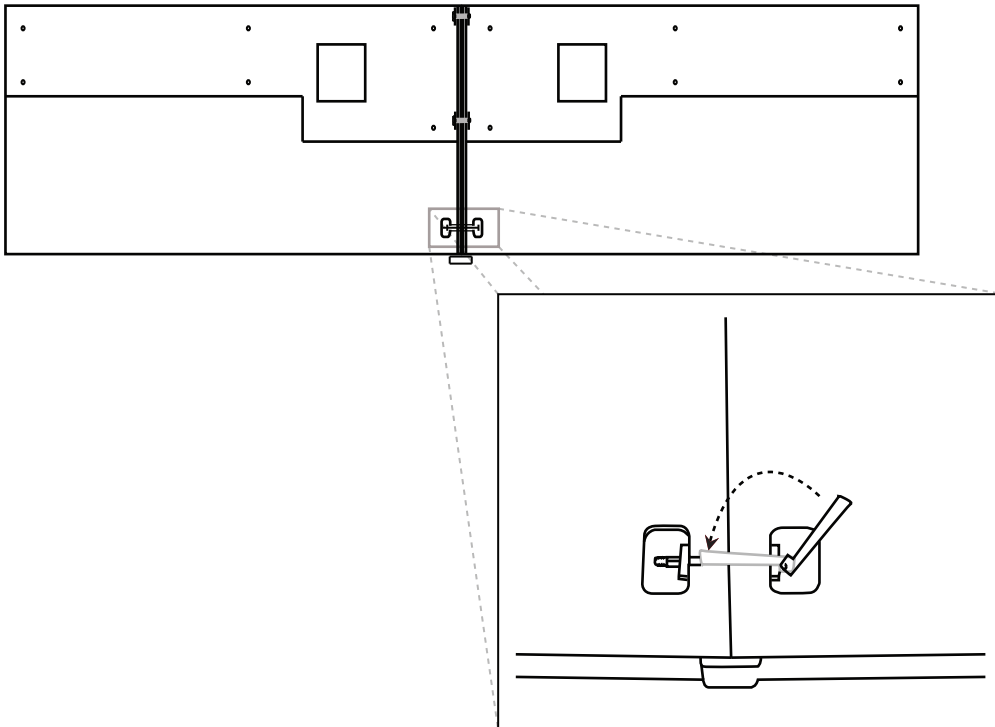


Step 7

Now that the bed and bookcases are joined together by the crown make sure that everything operates smoothly. The bookcases should slide with ease and the bed should fold down properly once fully completed.

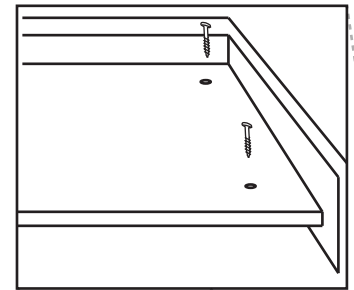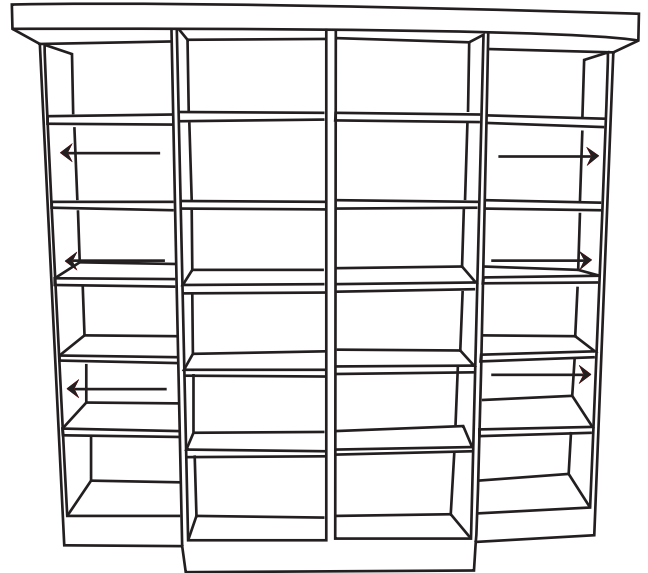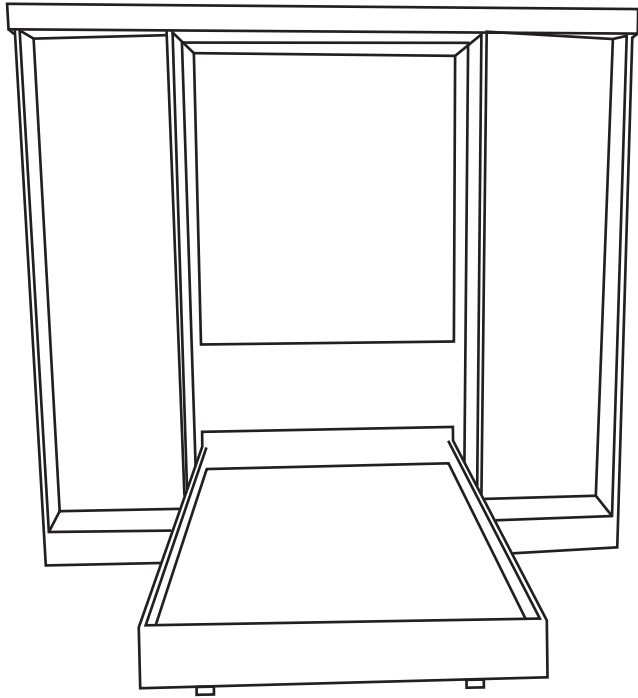


Step 8

Now that the bed, bookcases and crown are in position; use the provided wood screws to mount the crown to the bookcases. Place the screws in their designated pre-drilled holes.

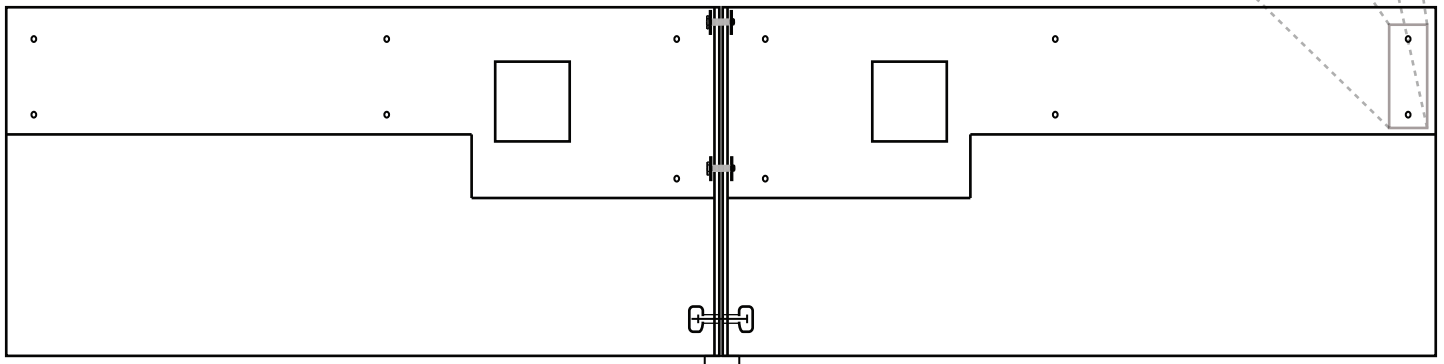

Step 9

If for some reason the sliding bookcases do not roll smoothly or seem to not be level, you can easily adjust the bookcases by tightening or loosening the adjustment bolts located at the bottom of the two units.

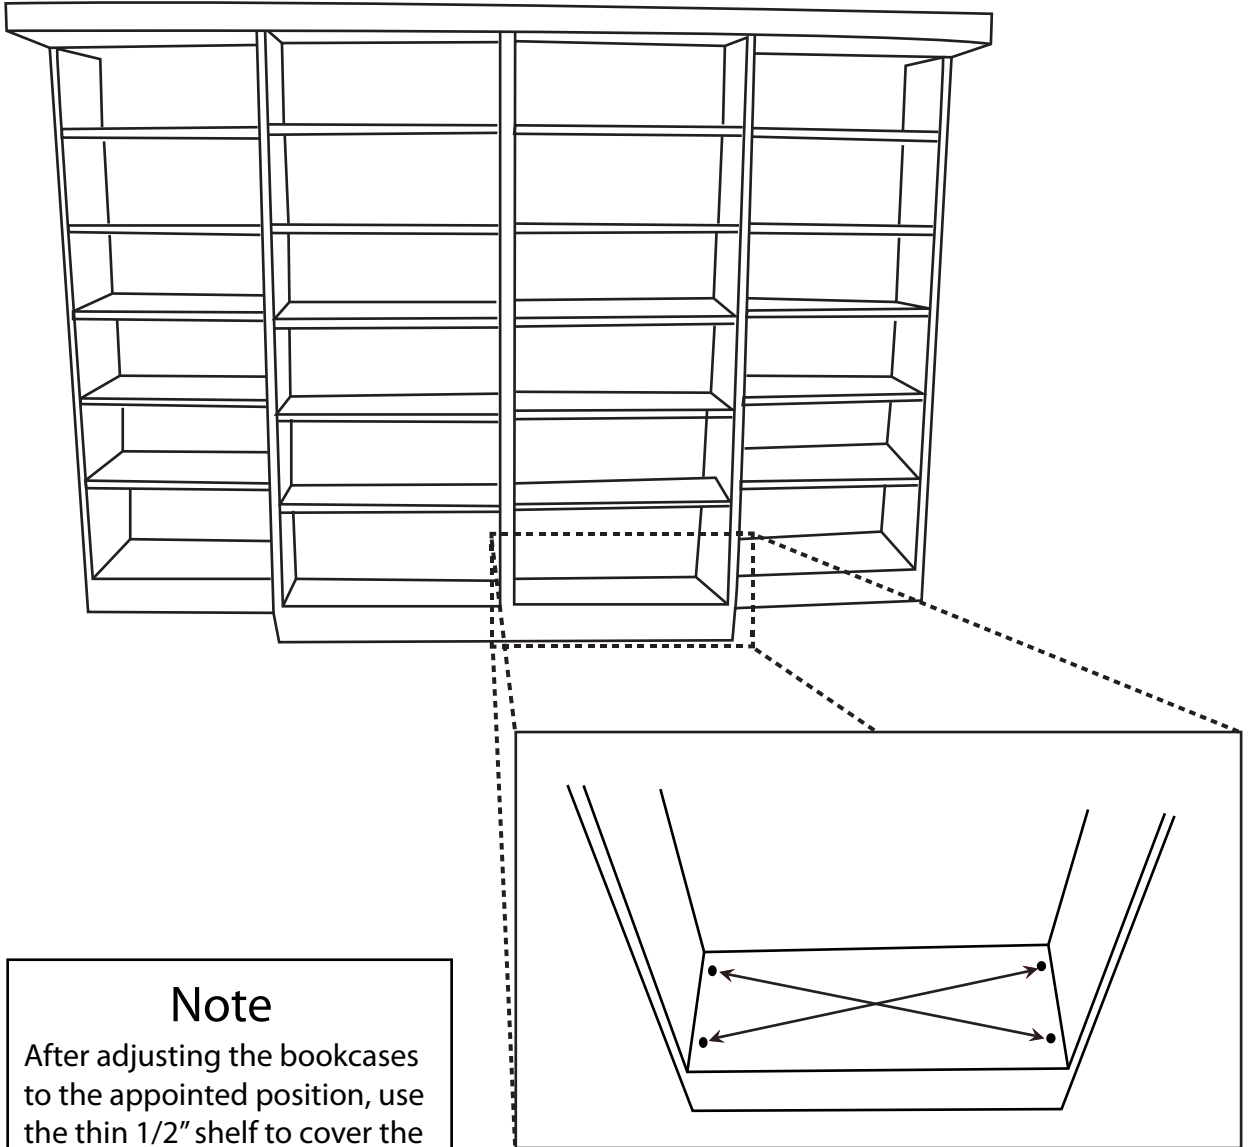

Note

After adjusting the bookcases to the appointed position, use the thin 1/2" shelf to cover the adjustment bolt holes.